Installation and Assembly - Projector Adapter Plate for Panasonic® PT-F100NT, PT-FW100NTU and PT-F100U Projector

Models: PAP 298, PAP 298-S, PAP 298-W

Before you start check the parts list below to make sure all of the parts shown are included.

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined weight of all attached equipment and hardware.

Parts List

Description	Qty.	PAP 298	PAP 298-S	PAP 298-W
AA adapter plate	1	055-1754	055-4754	055-2754
BB M4 x 20 mm socket pin serrated washer head screw	4	510-1061	510-2163	510-2163
CC retaining spacer	4	590-2020	590-2009	590-2009
DD 4mm security allen wrench (for PAP only)	1	560-9646	560-9646	560-9646

Note: Actual parts may appear slightly different than illustrated.

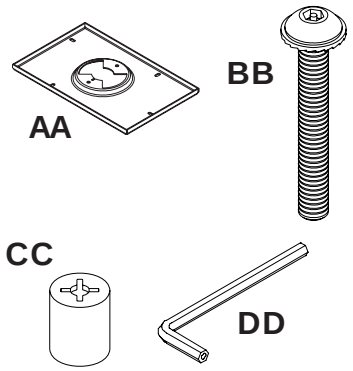

* Notch indicates front of projector

1 Flip projector upside down. Attach adapter plate (**AA**) using four retaining spacers (**CC**) and four M4 x 20 mm socket pin serrated washer head screws (**BB**). Tighten using 4 mm security allen wrench (**DD**) .

ISSUED: 04-19-07 SHEET #: 055-9489-1

Visit the Peerless Web Site at www.peerlessmounts.com

For customer care call 1-800-729-0307 or 708-865-8870.

©2007Peerless Industries, Inc. All rights reserved.
Peerless is a registered trademark of Peerless Industries, Inc.
All other brand and product names are trademarks or registered trademarks of their respective owners.